



Sample Installation Detail – w/Gothic Panning & Snap Trim

Scale: 5/16" = 1"

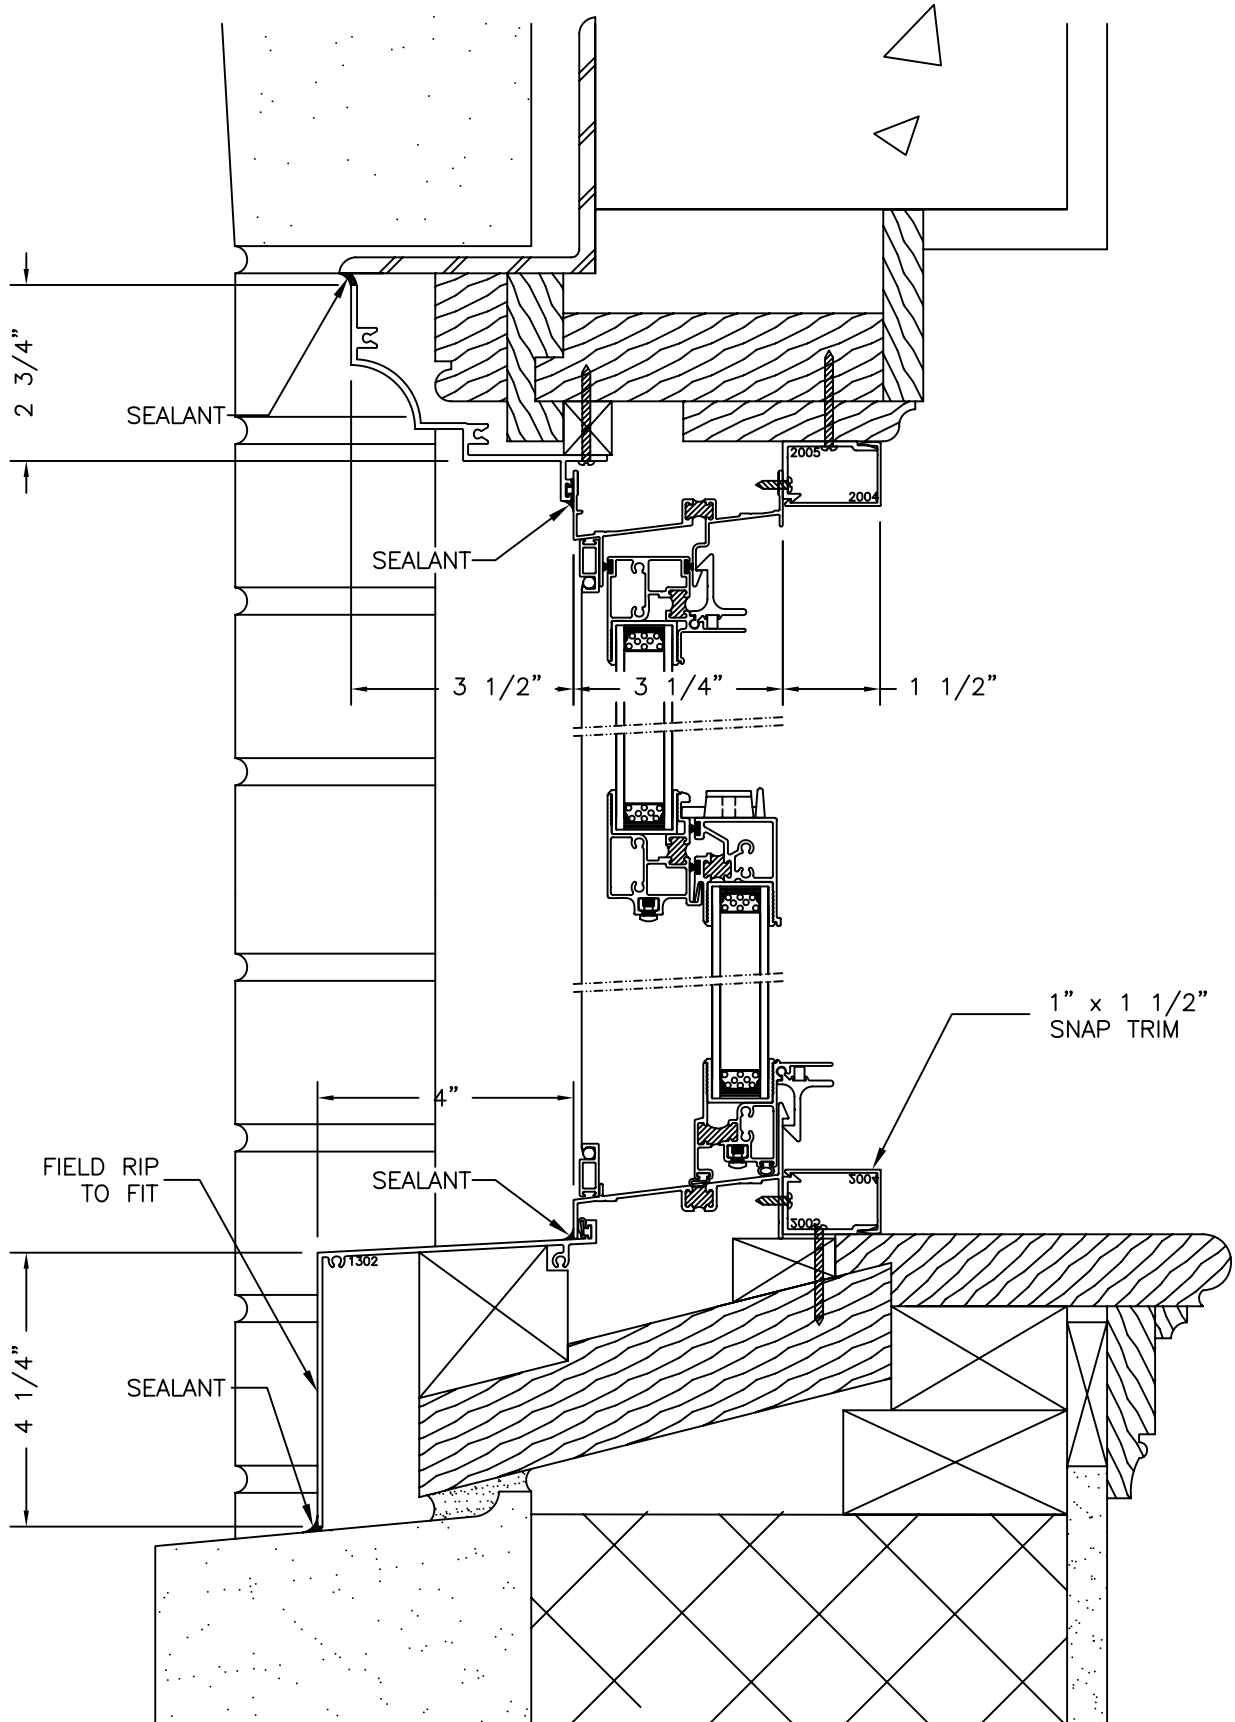

Sample Installation Detail – w/Deep Receptor & Starter Sill

Scale: 5/16" = 1"

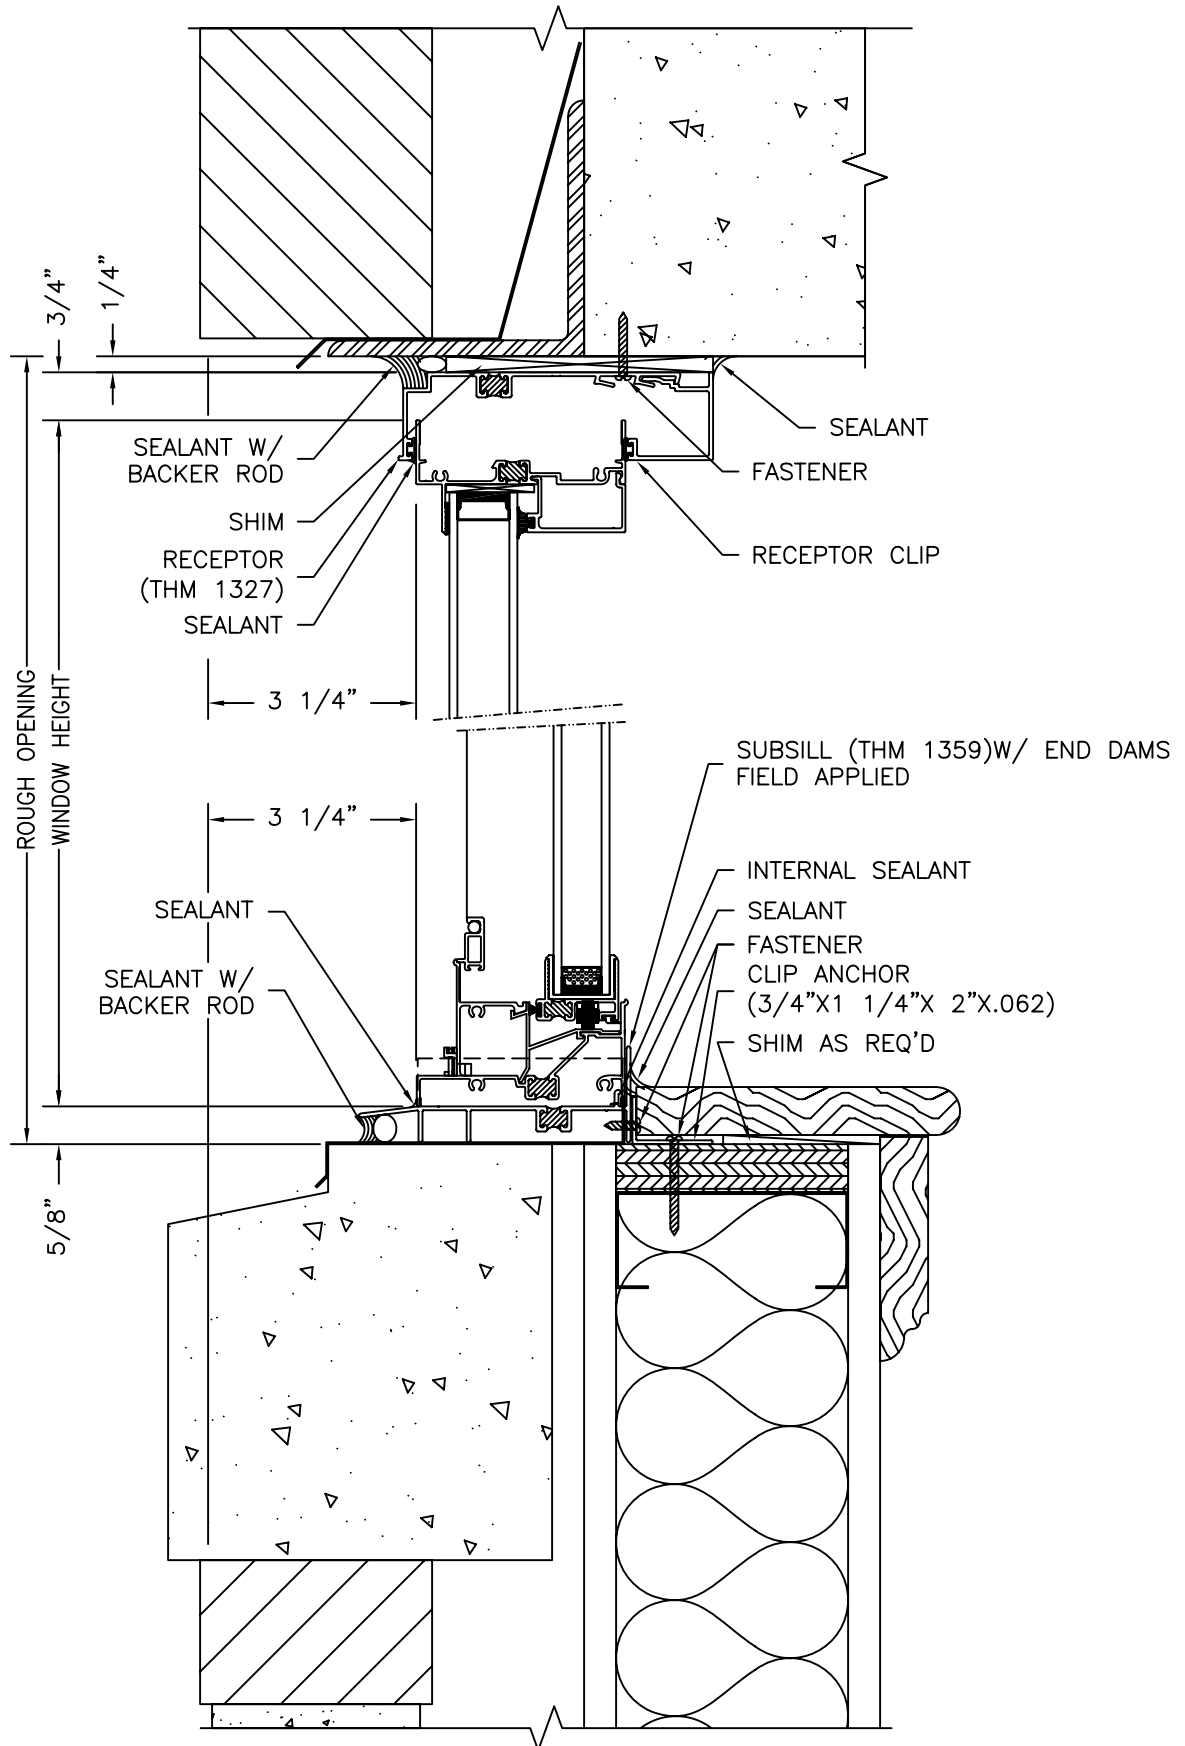

Sample Installation Detail – Basic Installation

Scale: 5/16" = 1"

